




<b>RS-22-32-TP-W</b>	
Brand Name	MAGNETIC STD
Ballast Type	Magnetic
Starting Method	Rapid Start
Lamp Connection	Series
Input Voltage	120
Input Frequency	60 HZ
Status	Active

### Electrical Specifications

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	MAX THD %	Power Factor	Lamp Current Crest Factor	B.E.F.
* (1)FC8T9 & (1)FC12T9	2	2232	50/10	0.40	46	0.70	15	0.96	1.7	1.52

### Wiring Diagram

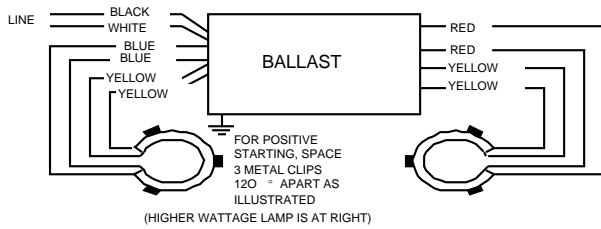


Diag. 105

The wiring diagram that appears above is for the lamp type denoted by the asterisk (\*)

### Standard Lead Length (inches)

	in.	cm.		in.	cm.
Black	15	38.1	Yellow/Blue		0
White	15	38.1	Blue/White		0
Blue		0	Brown		0
Red		0	Orange		0
Yellow		0	Orange/Black		0
Gray		0	Black/White		0
Violet		0	Red/White		0

### Enclosure

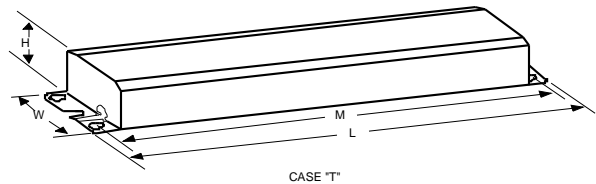

### Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
6.5 "	2.375 "	1.5 "	6.0 "
6 1/2	2 3/8	1 1/2	6
16.5 cm	6 cm	3.8 cm	15.2 cm

Revised 10/30/2000



Data is based upon tests performed by Advance Transformer in a controlled environment and representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

### ADVANCE

O'HARE INTERNATIONAL CENTER · 10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018

Customer Support/Technical Service: Phone: 800-372-3331 · Fax: 630-307-3071

Corporate Offices: Phone: 800-322-2086