




RS-2S200-TP	
Brand Name	MAGNETIC STD
Ballast Type	Magnetic
Starting Method	Rapid Start
Lamp Connection	Series
Input Voltage	120
Input Frequency	60 HZ
Status	Active

Electrical Specifications

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	MAX THD %	Power Factor	Lamp Current Crest Factor	B.E.F.
* F72T10/VHO	2	160	-20/-29	3.03	334	0.95	15	0.92	1.8	0.28
F72T12/VHO	2	168	-20/-29	3.41	399	0.99	15	0.97	1.7	0.25
F96PG17/VHO	2	215	-20/-29	3.88	464	0.99	10	1.00	1.6	0.21
F96PG17/VHO/ES	2	185	60/16	3.26	378	0.93	15	0.97	1.8	0.25
F96T10/VHO	2	205	-20/-29	3.55	419	0.95	15	0.98	1.7	0.23
F96T12/VHO	2	215	-20/-29	3.89	467	1.01	10	1.00	1.6	0.22
F96T12/VHO/ES	2	185	60/16	3.49	412	0.93	15	0.99	1.7	0.23

Wiring Diagram

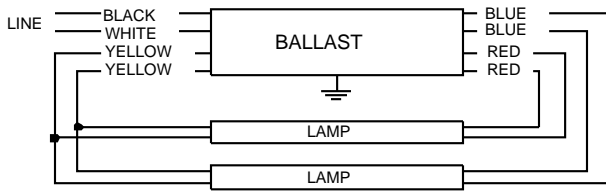


Diag. 21

The wiring diagram that appears above is for the lamp type denoted by the asterisk (*)

Standard Lead Length (inches)

	in.	cm.		in.	cm.
Black	22	55.9	Yellow/Blue		0
White	22	55.9	Blue/White		0
Blue	44	111.8	Brown		0
Red	44	111.8	Orange		0
Yellow	68	172.7	Orange/Black		0
Gray		0	Black/White		0
Violet		0	Red/White		0

Enclosure

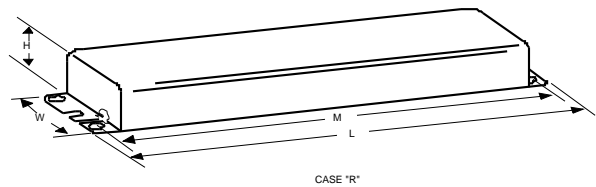

Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
14.3125 "	3.1875 "	2.625 "	13.75 "
14 5/16	3 3/16	2 5/8	13 3/4
36.4 cm	8.1 cm	6.7 cm	34.9 cm

Revised 07/01/1999



Data is based upon tests performed by Advance Transformer in a controlled environment and representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

ADVANCE

O'HARE INTERNATIONAL CENTER · 10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018
 Customer Support/Technical Service: Phone: 800-372-3331 · Fax: 630-307-3071
 Corporate Offices: Phone: 800-322-2086