




SM-140-S-TP

Brand Name	MAGNETIC STD
Ballast Type	Magnetic
Starting Method	Instant Start
Lamp Connection	Series
Input Voltage	120
Input Frequency	60 HZ
Status	Active

Electrical Specifications

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	MAX THD %	Power Factor	Lamp Current Crest Factor	B.E.F.
* F24T12	1	20	0/-18	0.45	45	0.93	35	0.83	1.7	2.07
F36T12	1	30	0/-18	0.50	57	0.92	35	0.95	1.9	1.61
F40T12/IS	1	40	0/-18	0.55	63	0.91	30	0.95	1.4	1.45
F40T17/IS	1	40	0/-18	0.62	69	0.91	30	0.93	1.9	1.31
F42T12	1	34	0/-18	0.51	57	0.91	35	0.94	1.9	1.58
F48T12	1	39	0/-18	0.54	62	0.90	30	0.95	1.7	1.46

Wiring Diagram

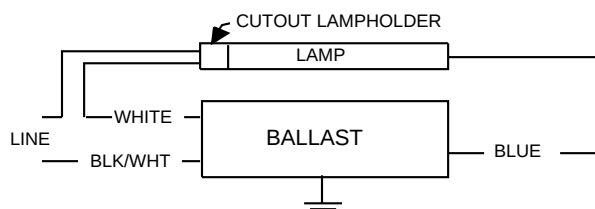


Diag. 10

The wiring diagram that appears above is for the lamp type denoted by the asterisk (*)

Standard Lead Length (inches)

	in.	cm.		in.	cm.
Black			Yellow/Blue		
White	34		Blue/White		
Blue	22		Brown		
Red			Orange		
Yellow			Orange/Black		
Gray			Black/White	10	
Violet			Red/White		

Enclosure

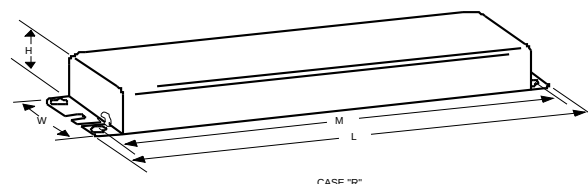

Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
11.75 "	3.109375 "	1.78125 "	11.14062 "
11 3/4	3 7/64	1 25/32	11 9/64
29.8 cm	7.9 cm	4.5 cm	28.3 cm

Revised 07/01/1999



Data is based upon tests performed by Advance Transformer in a controlled environment and representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

ADVANCE

O'HARE INTERNATIONAL CENTER · 10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018

Customer Support/Technical Service: Phone: 800-372-3331 · Fax: 630-307-3071

Corporate Offices: Phone: 800-322-2086

Reprinted By BulbsDepot.com